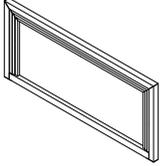


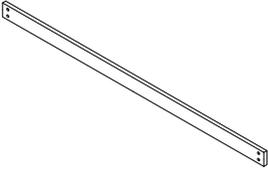




**Warning :**

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.


**Hardware and Parts packed with the Headboard**

<p>King Panel Headboard - 73986</p>  <p>(H-A) 1 PC.</p>	<p>Left Leg</p>  <p>(H-B) 1 PC.</p>	<p>Right Leg</p>  <p>(H-C) 1 PC.</p>	<p>Headboard Stretcher</p>  <p>(H-D) 1 PC.</p>	
<p>Allen Head Bolt Ø5/16"-18 x 1-1/2"</p>  <p>(H-E) 4 PCS.</p>	<p>Allen Head Bolt Ø5/16"-18 x 1-3/4"</p>  <p>(H-F) 6 PCS.</p>	<p>Flat Washer Ø5/16" x Ø19mm</p>  <p>(H-G) 10 PCS.</p>	<p>Spring Washer Ø5/16"</p>  <p>(H-H) 10 PCS.</p>	<p>Allen key 5mm</p>  <p>(H-I) 1 PC.</p>


**Hardware and Parts packed with the Footboard**
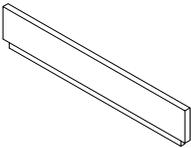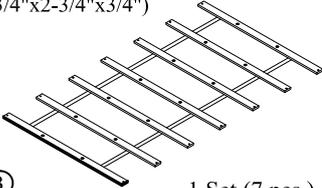
<p>King Panel Footboard - 73981</p>  <p>(F-A) 1 PC.</p>	<p>Wood Slat (76-3/4"x2-3/4"x3/4")</p>  <p>(F-B) 1 Set (7 pcs.)</p>	<p>Support leg (1"x1"x6")</p>  <p>(F-C) 14 PCS.</p>	<p>Screw #8x1"</p>  <p>(F-D) 14 PCS.</p>
--	--	---	---

**Hardware and Parts packed with the Bed Rails**

<p>Panel Bed Rails - 73972</p>  <p>(R-A) 2 PCS.</p>	<p>Thread Bolt Ø5/16" -18 x 4-1/2"</p>  <p>(R-B) 8 PCS.</p>	<p>Hex Nut Ø5/16" x 12mm</p>  <p>(R-C) 8 PCS.</p>	<p>Spring Washer Ø5/16"</p>  <p>(R-D) 8 PCS.</p>	<p>Curved Washer Ø5/16"</p>  <p>(R-E) 8 PCS.</p>
---	--	--	---	---

<p>12 mm Open Wrench</p>  <p>(R-F) 1 PC.</p>	<p>Tool Required (not provided) Phillips Screwdriver</p>  <p>1 PC.</p>
---	---

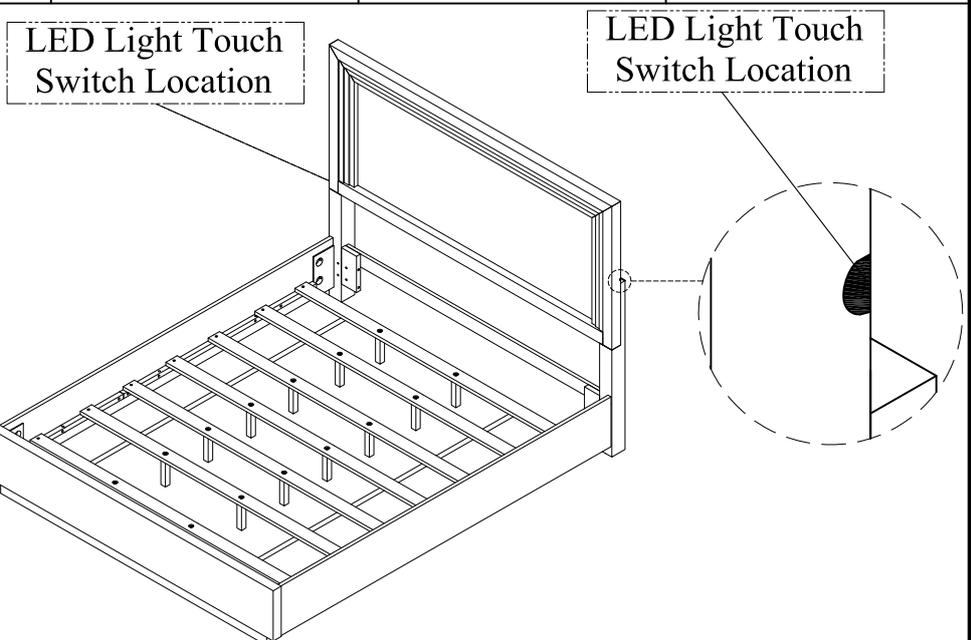





**King Bed**

- 73986--6/0-6/6 Panel Headboard
- 73981--6/6 Panel Footboard
- 73972--5/0-6/6 Panel Bed Rails




**Warning :**

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.



**Hardware and Parts packed with the Headboard**
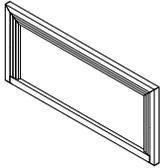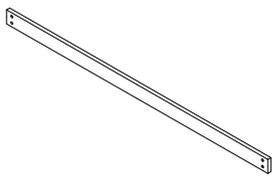
<p>King Panel Headboard - 73986</p>  <p>(H-A) 1 PC.</p>	<p>Left Leg</p>  <p>(H-B) 1 PC.</p>	<p>Right Leg</p>  <p>(H-C) 1 PC.</p>	<p>Headboard Stretcher</p>  <p>(H-D) 1 PC.</p>	
<p>Allen Head Bolt Ø5/16"-18 x 1-1/2"</p>  <p>(H-E) 4 PCS.</p>	<p>Allen Head Bolt Ø5/16"-18 x 1-3/4"</p>  <p>(H-F) 6 PCS.</p>	<p>Flat Washer Ø5/16" x Ø19mm</p>  <p>(H-G) 10 PCS.</p>	<p>Spring Washer Ø5/16"</p>  <p>(H-H) 10 PCS.</p>	<p>Allen key 5mm</p>  <p>(H-I) 1 PC.</p>

**Hardware and Parts packed with the Footboard**
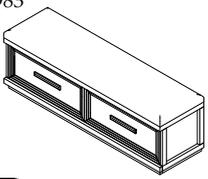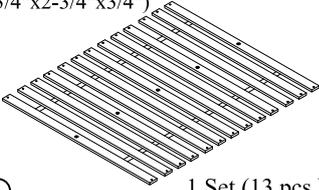
<p>King Storage Footboard - 73983</p>  <p>(F-A) 1 PC.</p>	<p>Wood Slat (60-3/4"x2-3/4"x3/4")</p>  <p>(F-B) 1 Set (13 pcs.)</p>	<p>Support leg rails (79" x 2-3/4" x 3/4")</p>  <p>(F-C) 2 PCS.</p>	<p>Support leg (1-1/2"x1-1/2"x13-1/4")</p>  <p>(F-D) 10 PCS.</p>	<p>Screw #8x1"</p>  <p>(F-E) 26 PCS.</p>
---	---	--	---	---


**Hardware and Parts packed with the Bed Rails**
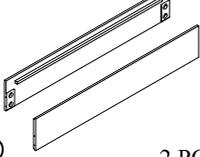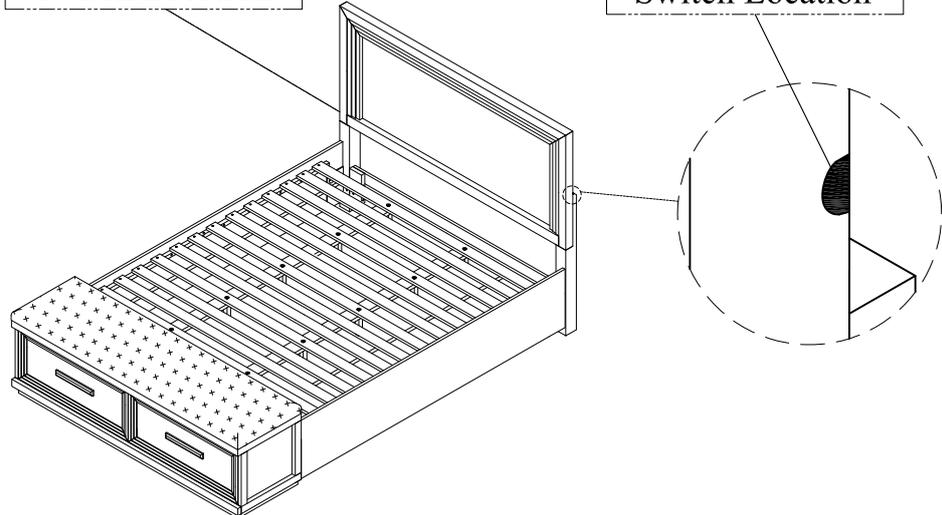
<p>Storage Bed Rails - 73979</p>  <p>(R-A) 2 PCS.</p>	<p>Thread Bolt Ø5/16"-18 x 4-1/2"</p>  <p>(R-B) 8 PCS.</p>	<p>Hex Nut Ø5/16" x 12mm</p>  <p>(R-C) 8 PCS.</p>	<p>Spring Washer Ø5/16"</p>  <p>(R-D) 8 PCS.</p>	<p>Curved Washer Ø5/16"</p>  <p>(R-E) 8 PCS.</p>
<p>12 mm Open Wrench</p>  <p>(R-F) 1 PC.</p>	<p>Tool Required (not provided) Phillips Screwdriver</p>  <p>1 PC.</p>	<div style="display: flex; justify-content: space-around;"> <div style="border: 1px dashed black; padding: 5px;">LED Light Touch Switch Location</div> <div style="border: 1px dashed black; padding: 5px;">LED Light Touch Switch Location</div> </div> 		


**King Bed**

- 73986--6/0-6/6 Panel Headboard
- 73983--6/6 Uph Storage Footboard
- 73979--5/0-6/6 Storage Bed Rails


Step 1

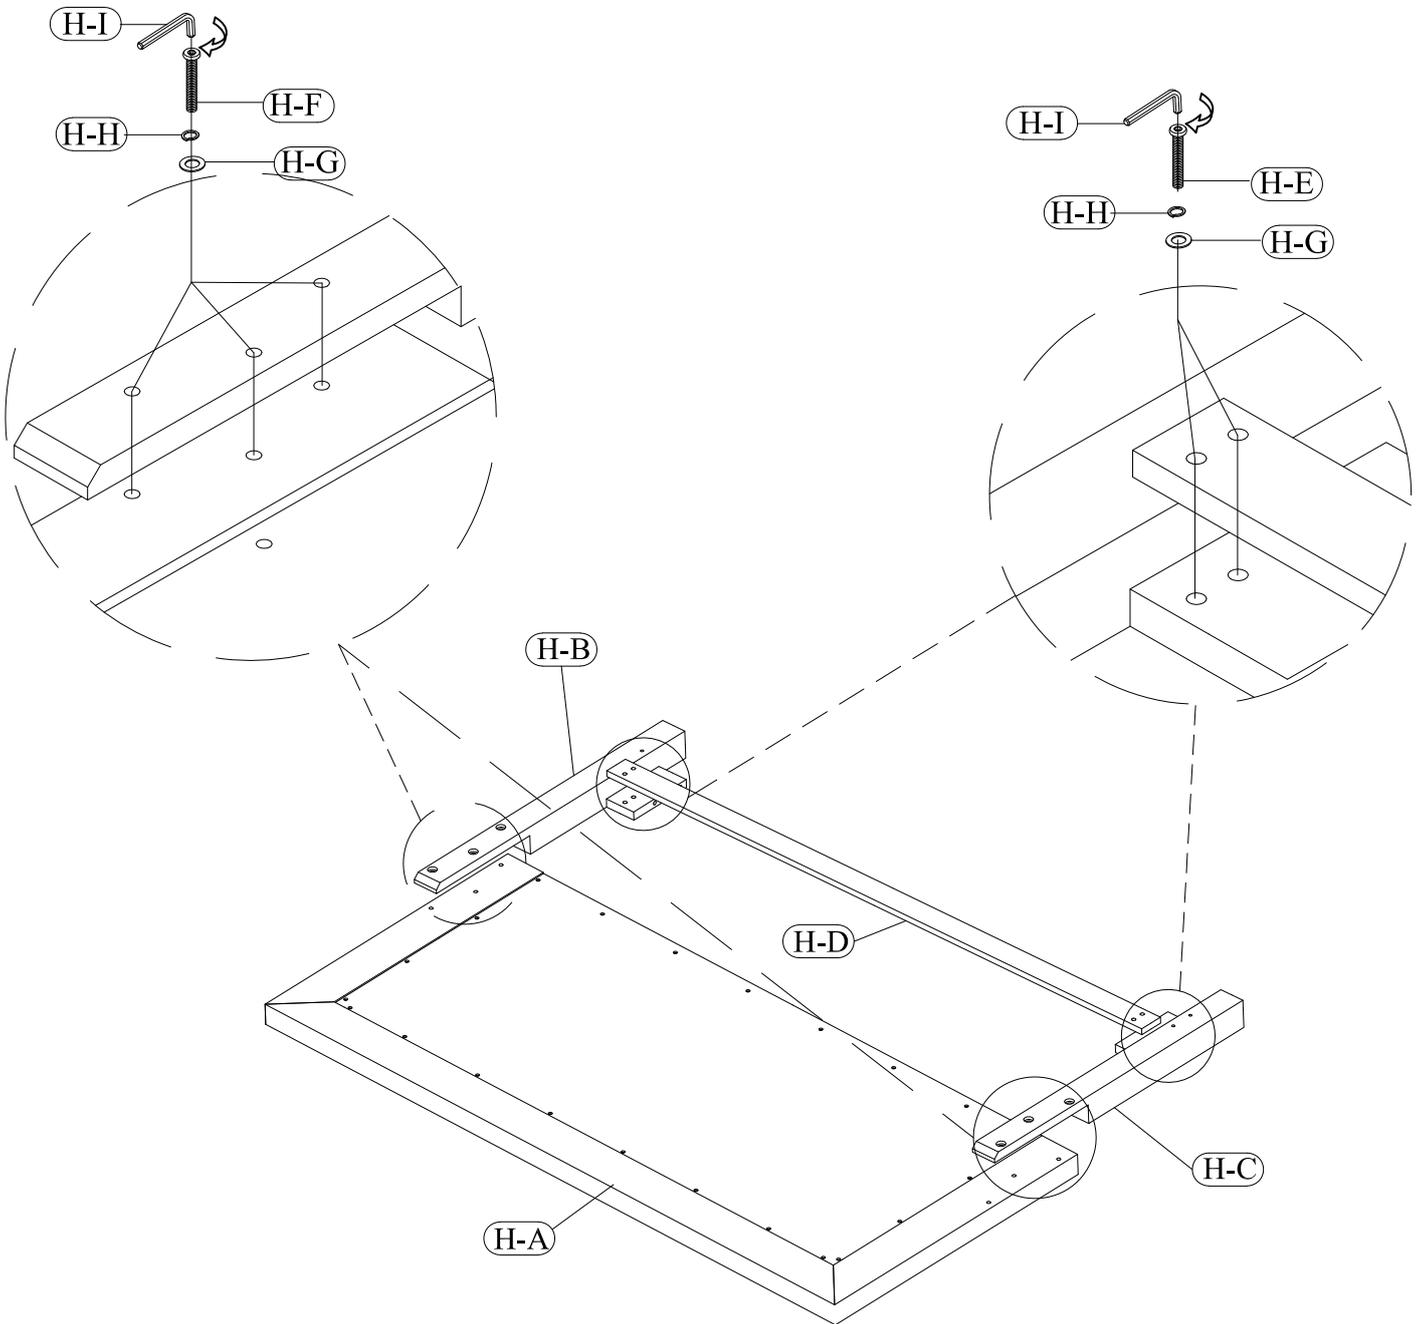


Step 2

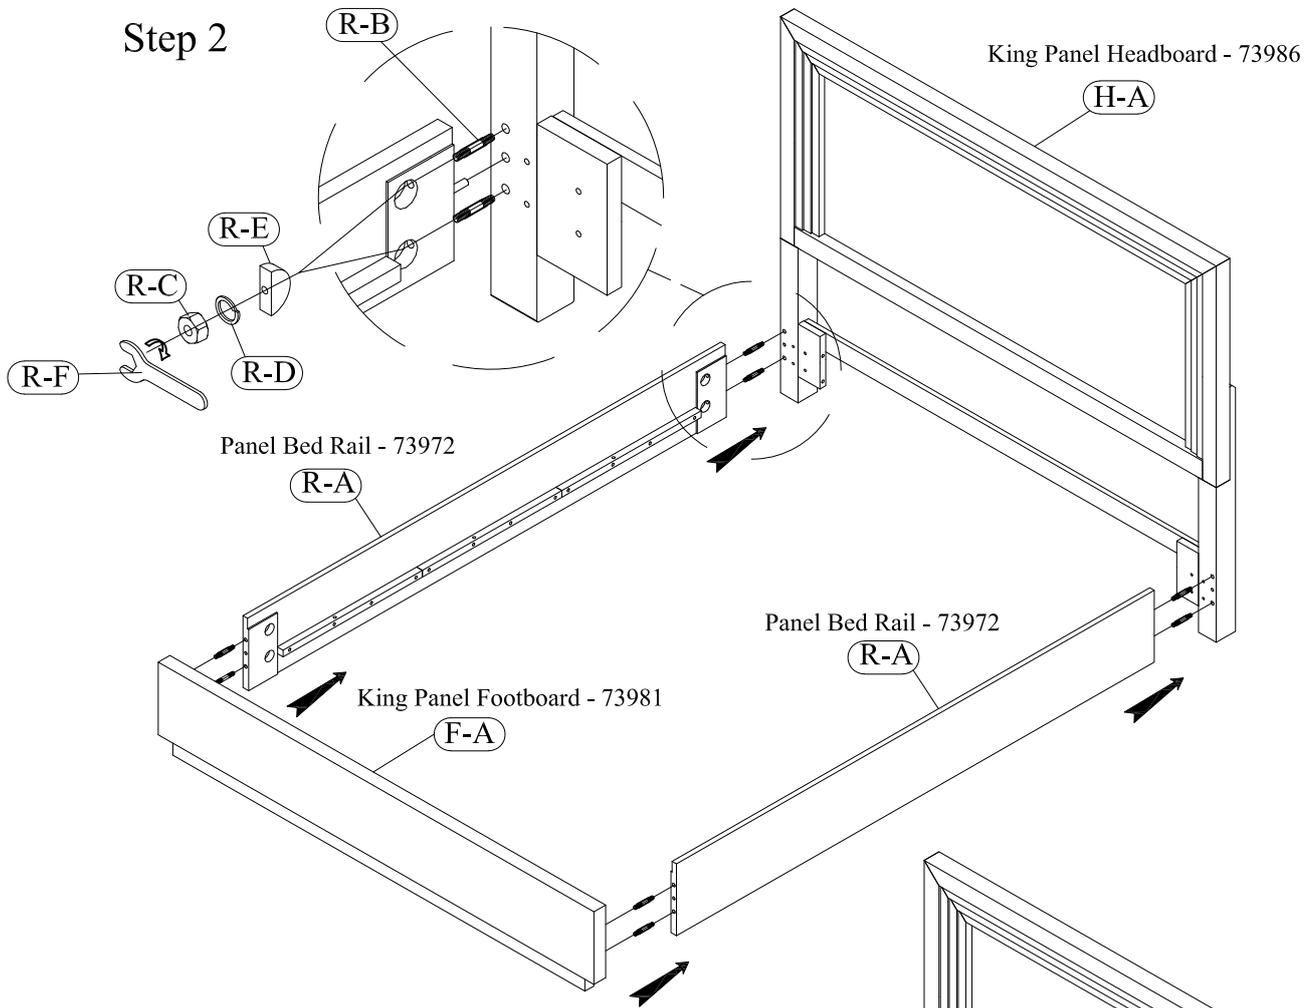

Step 4

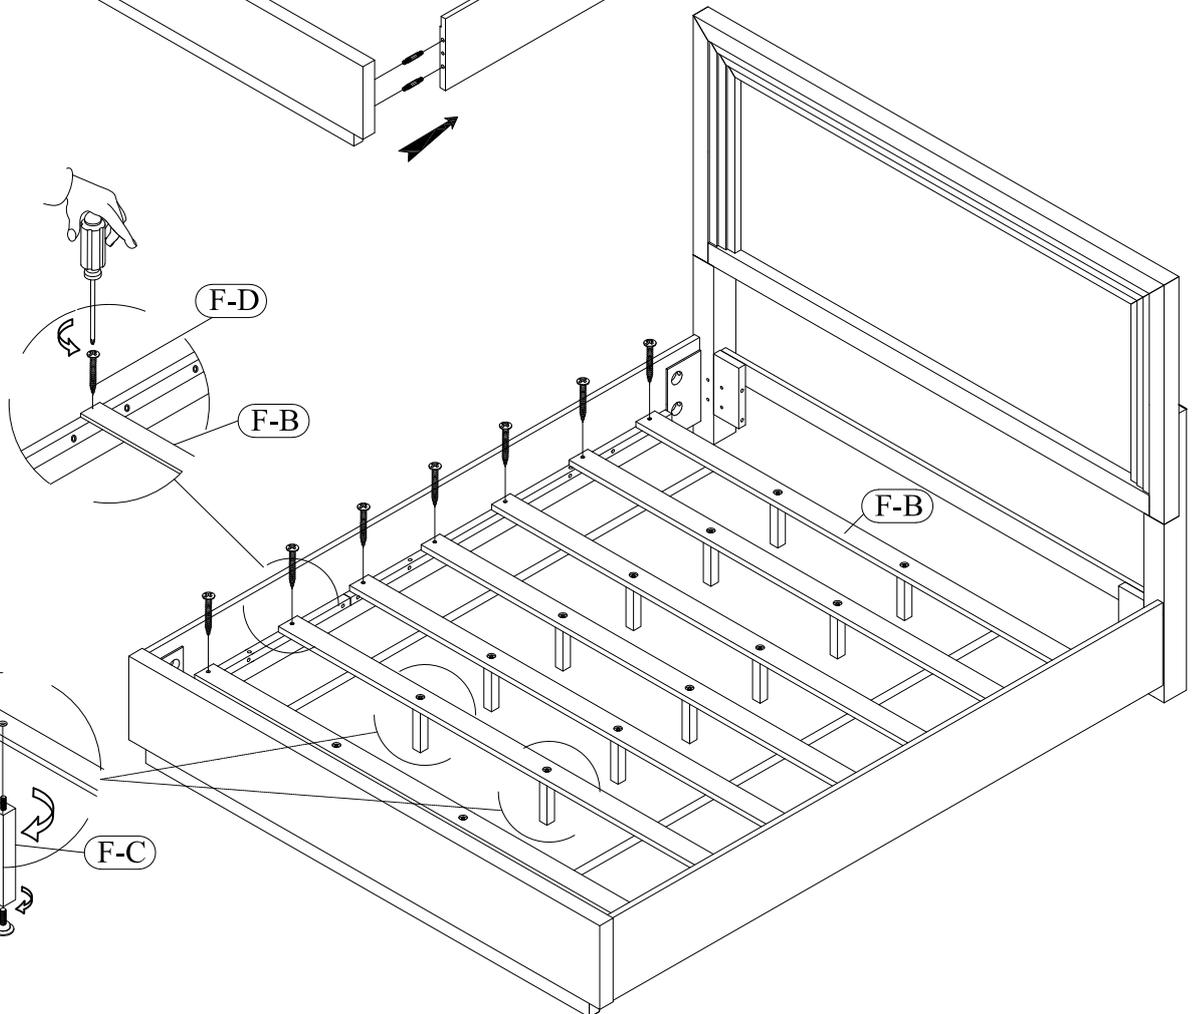


Step 3

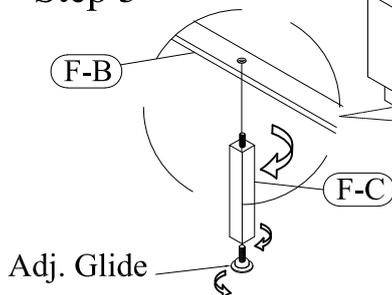


Adj. Glide


**Step 2**

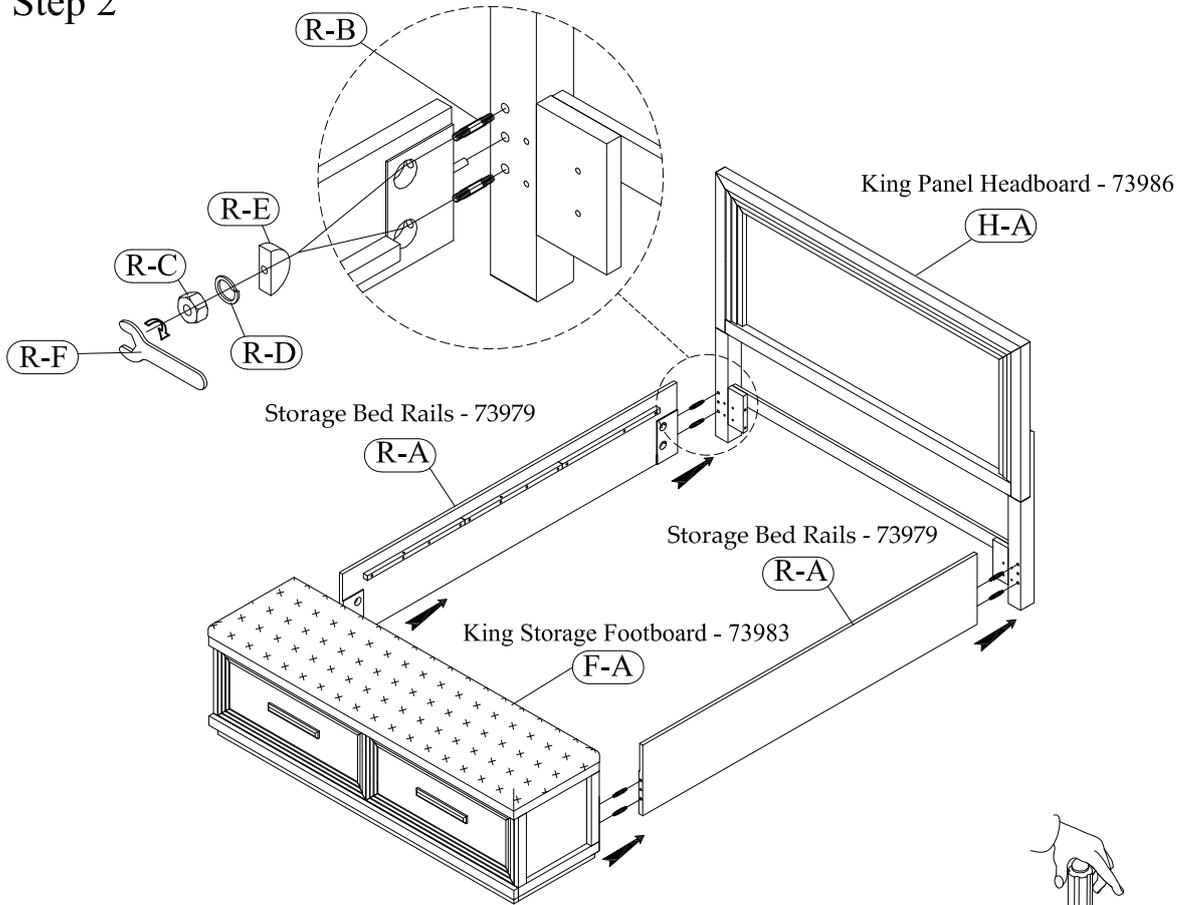

**Step 3**

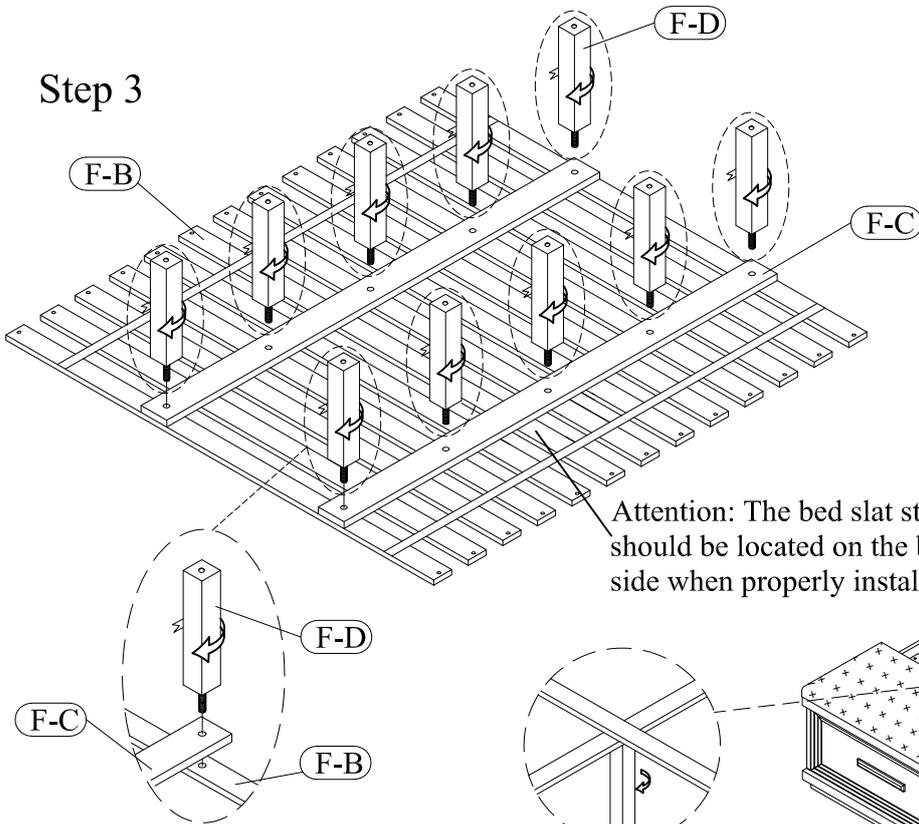



**Step 4**

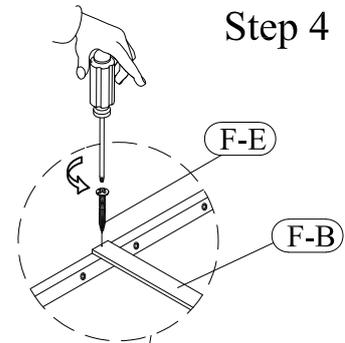

Adj. Glide


**Step 5**

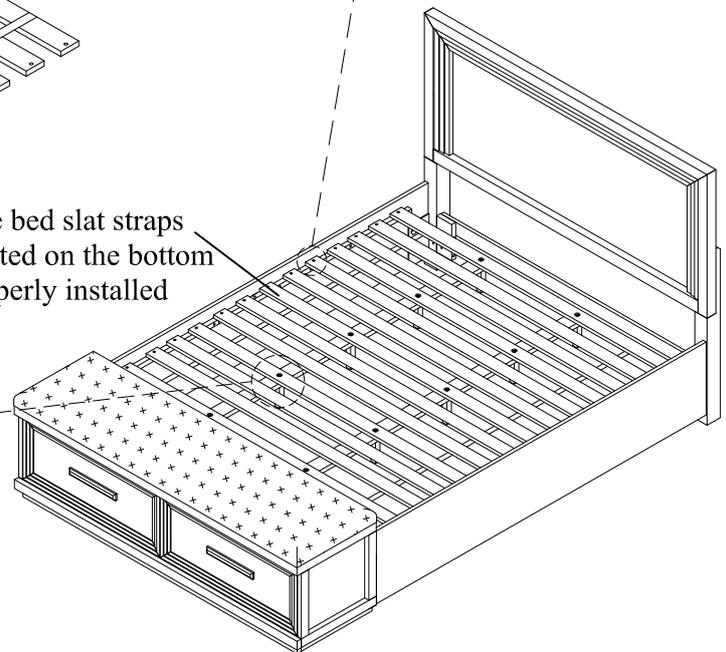

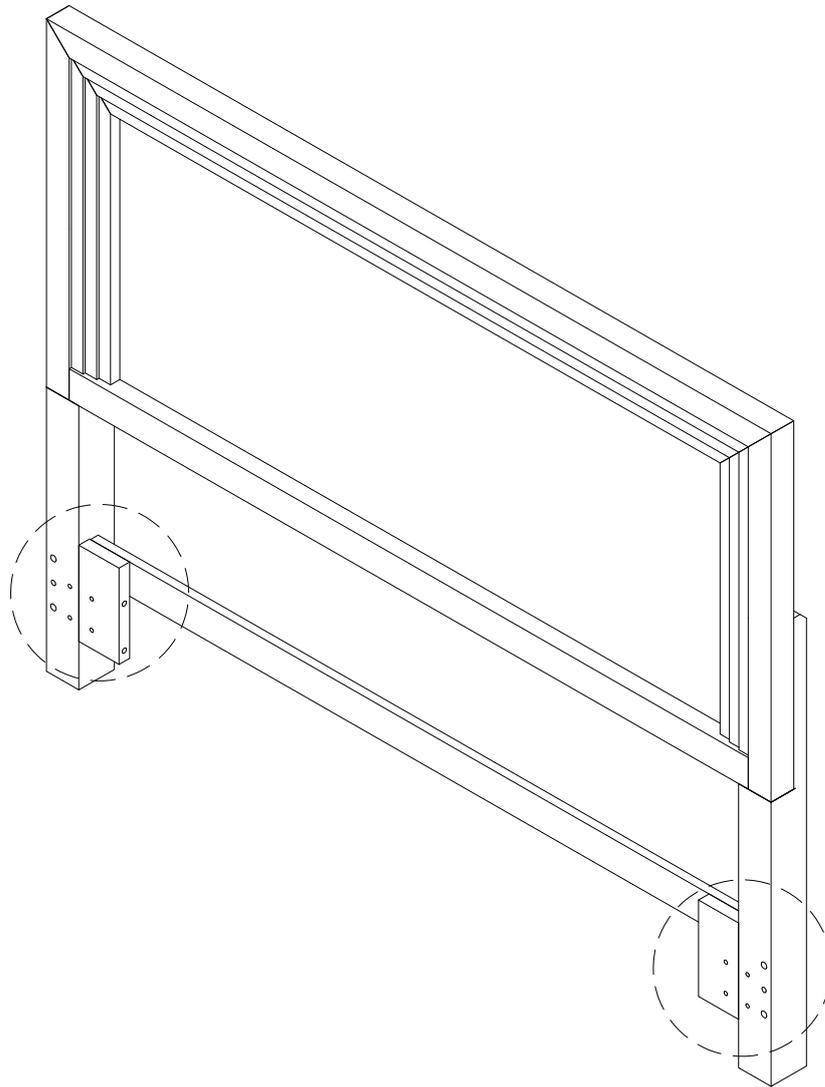

USE THESE HOLES TO ATTACH A 6/6 KING SIZE  
METAL BED FRAME CUSTOMER TO PROVIDE HARDWARE


USE THESE HOLES TO ATTACH A 6/0 CALIFORNIA KING SIZE  
METAL BED FRAME CUSTOMER TO PROVIDE HARDWARE

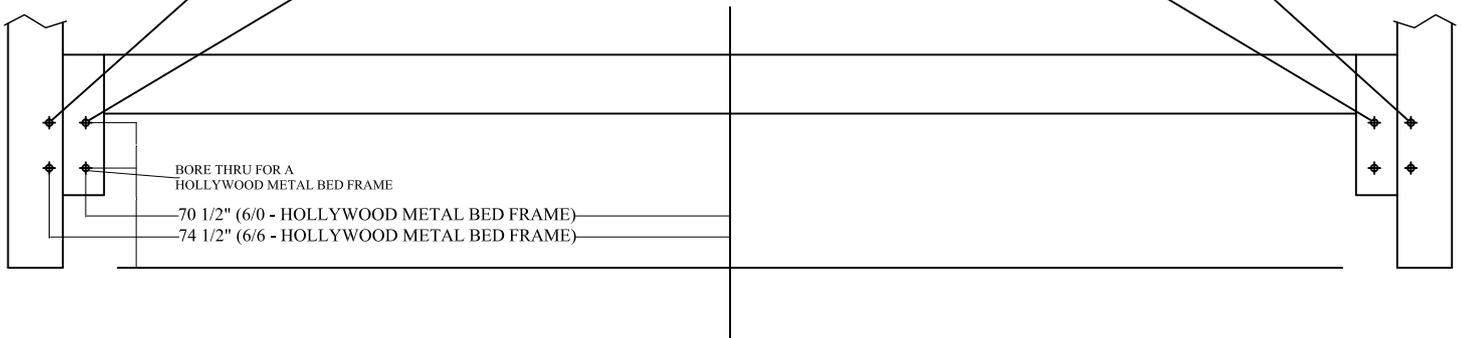

*The Headboard may be used alone with a King or California King Size Metal Bed Frame*

# Cascade Casual Mink


## 73986 - 6/0-6/6 Panel Headboard W/LIGHT

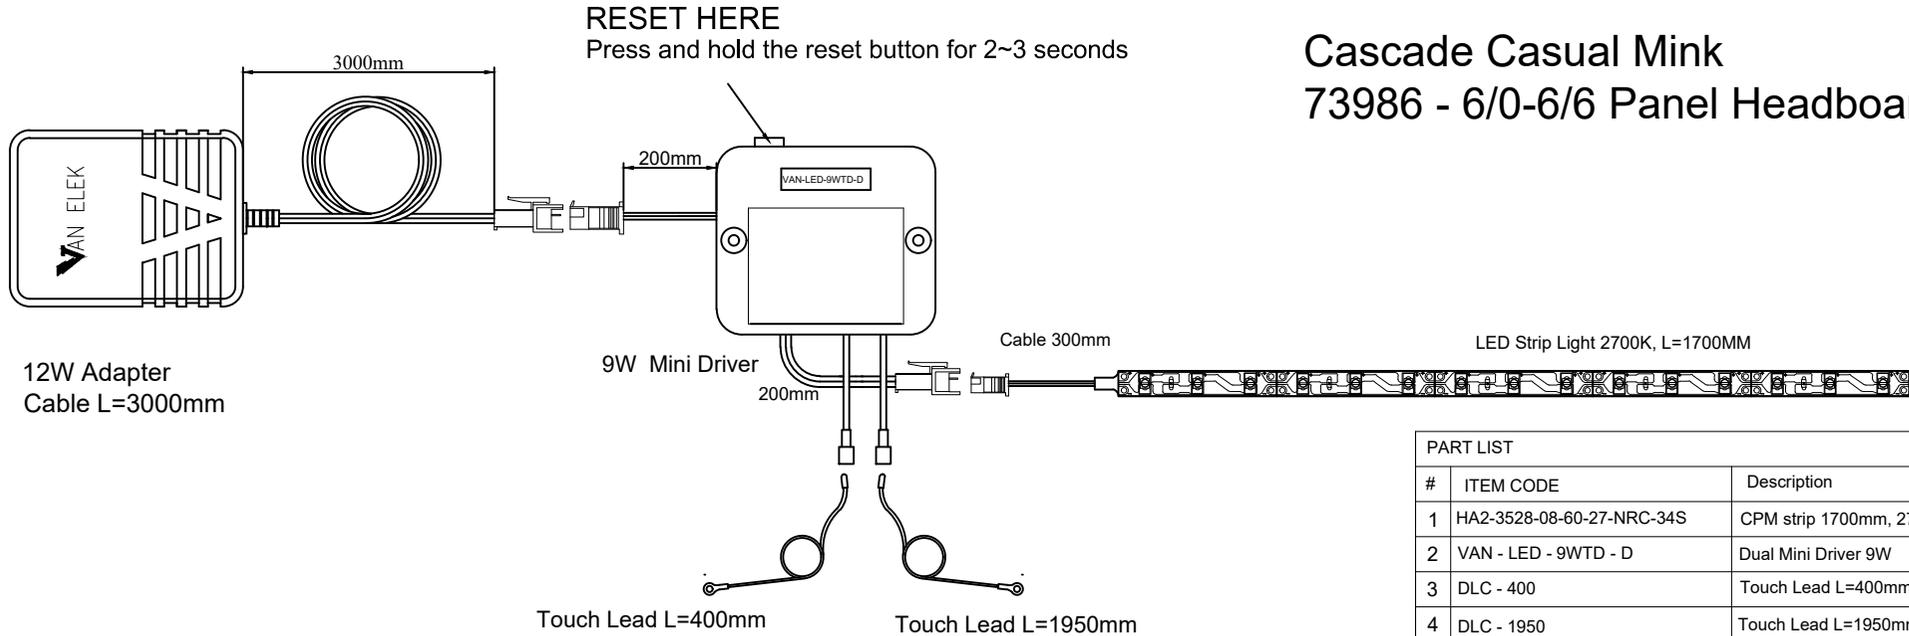

PART LIST			
#	ITEM CODE	Description	QTY
1	HA2-3528-08-60-27-NRC-34S	CPM strip 1700mm, 2700K and cable 300mm	1pc
2	VAN - LED - 9WTD - D	Dual Mini Driver 9W	1pc
3	DLC - 400	Touch Lead L=400mm	1pc
4	DLC - 1950	Touch Lead L=1950mm	1pc
5	VAN - USAD - 1212 - F -AJC	12W Adapter, Cable L=3000mm	1pc

Electronic trouble shooting tips if LED light does not turn on.

1. Inspect wiring for any signs of cut wires or loose connections.
2. To make sure all connections are securely fastened, disconnect and then reconnect all connections.
3. Press and hold reset button located on the top edge of Mini Driver for 2-3 seconds.

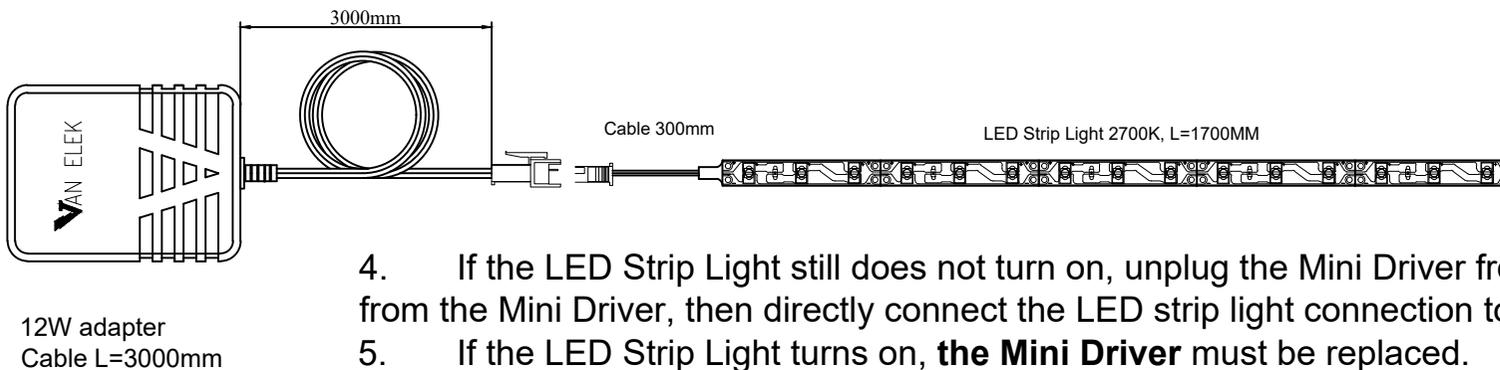

4. If the LED Strip Light still does not turn on, unplug the Mini Driver from Adapter, unplug the LED Strip Light from the Mini Driver, then directly connect the LED strip light connection to the Adapter.
5. If the LED Strip Light turns on, **the Mini Driver** must be replaced.