


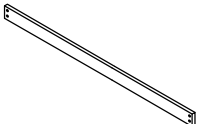






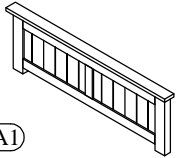
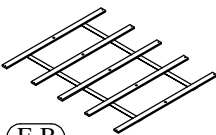


**Warning :**

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.



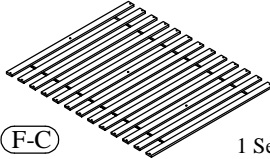







**Hardware and Parts packed with the Headboard**

<p>79270 Queen Panel Headboard</p>  <p>(H-A) 1 pc.</p>	<p>Headboard Post (Left)</p>  <p>(H-B) 1 pc.</p>	<p>Headboard Post (Right)</p>  <p>(H-C) 1 pc.</p>	<p>Headboard Stretcher</p>  <p>(H-D) 1 pc.</p>
<p>Allen Head Bolt ϕ5/16"-18 x 1-3/4"</p>  <p>(H-E) 10 pcs.</p>	<p>Spring Washer ϕ5/16"</p>  <p>(H-F) 10 pcs.</p>	<p>Flat Washer ϕ5/16" x 19*2mm</p>  <p>(H-G) 10 pcs.</p>	<p>Allen Key 5mm</p>  <p>(H-H) 1 pc.</p>




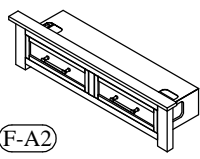










**Hardware and Parts packed with the Footboard**

<p>79271 Queen Panel Footboard</p>  <p>(F-A1) 1 pc.</p>	<p>Wood Slat 61" long</p>  <p>(F-B) 1 Set.</p>	<p>Slat Support Leg 6-3/4" x 1-1/4" x 1-1/4"</p>  <p>(F-C) 5 pcs.</p>	<p>Wood Screw #8 x 1"</p> <p>(F-D) 10 pcs.</p>	<p>Screw Driver not included</p> 
---	---	---	--	--

**Hardware and Parts packed with the Storage Footboard**

<p>79273 Queen Storage Footboard</p>  <p>(F-A2) 1 pc.</p>	<p>Footboard Support Leg 7-1/4" x 1-1/4" x 1-1/4"</p>  <p>(F-B) 2 pcs.</p>	<p>Wood Slat 61" long</p>  <p>(F-C) 1 Set.</p>	<p>Center Support Rail 61" x 2-3/4" x 3/4"</p>  <p>(F-D) 1 pc.</p>	<p>Slat Support Leg 12" x 1-1/4" x 1-1/4"</p>  <p>(F-E) 3 pcs.</p>	
<p>Allen Head Bolt ϕ5/16"-18 x 1-1/2"</p>  <p>(F-F) 4 pcs.</p>	<p>Spring Washer ϕ5/16"</p>  <p>(F-G) 4 pcs.</p>	<p>Flat Washer ϕ5/16" x 19*2mm</p>  <p>(F-H) 4 pcs.</p>	<p>Allen Key 5mm</p>  <p>(F-I) 1 pc.</p>	<p>Wood Screw #8 x 1"</p> <p>(F-J) 26 pcs.</p>	<p>Screw Driver not included</p> 

**Hardware and Parts packed with the Bed Rail**

<p>79272 Panel Side Rails</p>  <p>(R-A1) 2 pcs.</p>	<p>All-Thread Bolt ϕ5/16"-18 x 3-1/2"</p>  <p>(R-B) 8 pcs.</p>	<p>Curved Washer ϕ5/16"</p>  <p>(R-C) 8 pcs.</p>	<p>Flat Washer ϕ5/16" x 16*2mm</p>  <p>(R-D) 8 pcs.</p>	<p>Spring Washer ϕ5/16"</p>  <p>(R-E) 8 pcs.</p>	<p>Hex Nut ϕ5/16" x L17</p>  <p>(R-F) 8 pcs.</p>	<p>Open Wrench 13mm</p>  <p>(R-G) 1 pc.</p>
<p>79274 Storage Bed Rails</p>  <p>(R-A2) 2 pcs.</p>	<p>All-Thread Bolt ϕ5/16"-18 x 3-1/2"</p>  <p>(R-B) 8 pcs.</p>	<p>Curved Washer ϕ5/16"</p>  <p>(R-C) 8 pcs.</p>	<p>Flat Washer ϕ5/16" x 16*2mm</p>  <p>(R-D) 8 pcs.</p>	<p>Spring Washer ϕ5/16"</p>  <p>(R-E) 8 pcs.</p>	<p>Hex Nut ϕ5/16" x L17</p>  <p>(R-F) 8 pcs.</p>	<p>Open Wrench 13mm</p>  <p>(R-G) 1 pc.</p>

5/0 Queen Bed

- 79270 -- 5/0 Panel Headboard
- 79271 -- 5/0 Panel Footboard
- 79272 -- 5/0-6/6 Panel Side Rails


5/0 Queen Storage Bed

- 79270 -- 5/0 Panel Headboard
- 79273 -- 5/0 Storage Footboard
- 79274 -- 5/0-6/6 Storage Bed Rails


5/0 Queen Bed

79270 --5/0 Panel Headboard

STEP 1

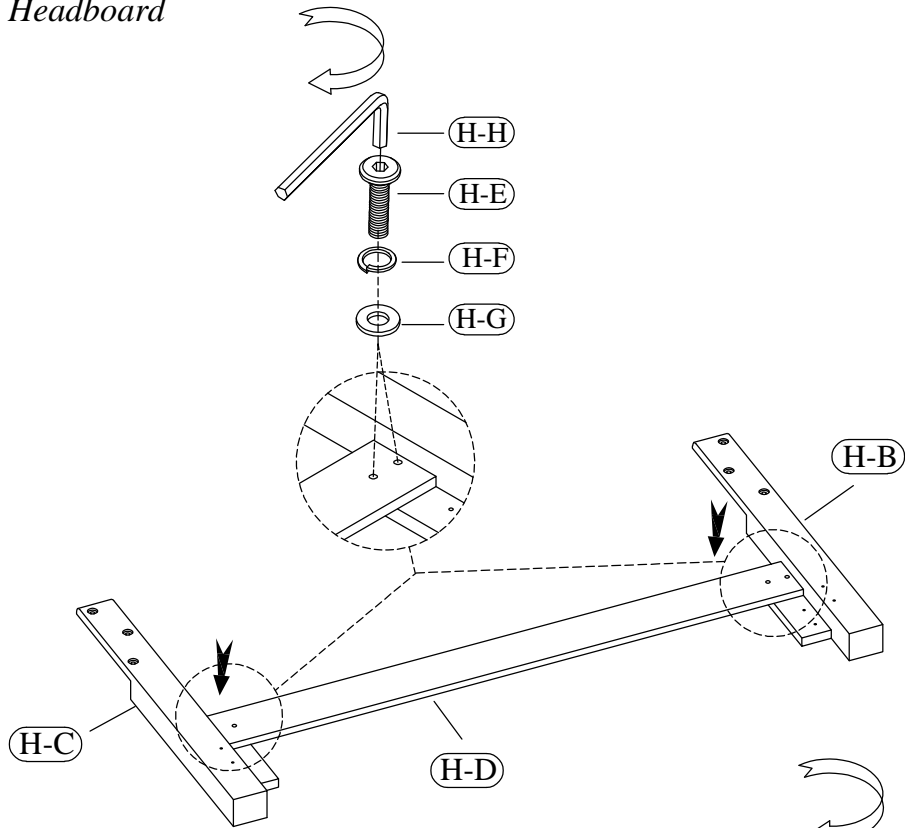

STEP 2

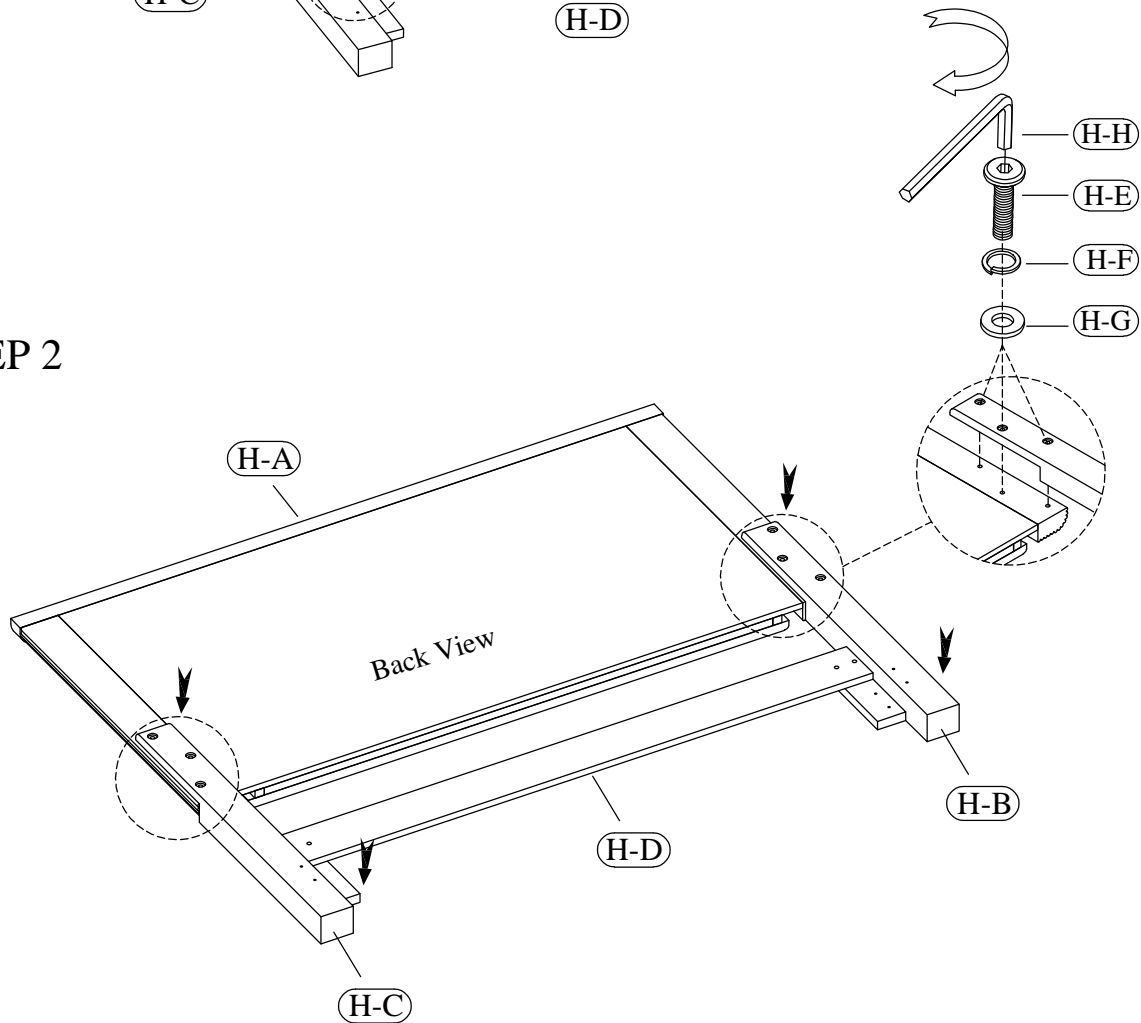


5/0 Queen Bed


79270 -- 5/0 Panel Headboard

79271 -- 5/0 Panel Footboard


STEP 3

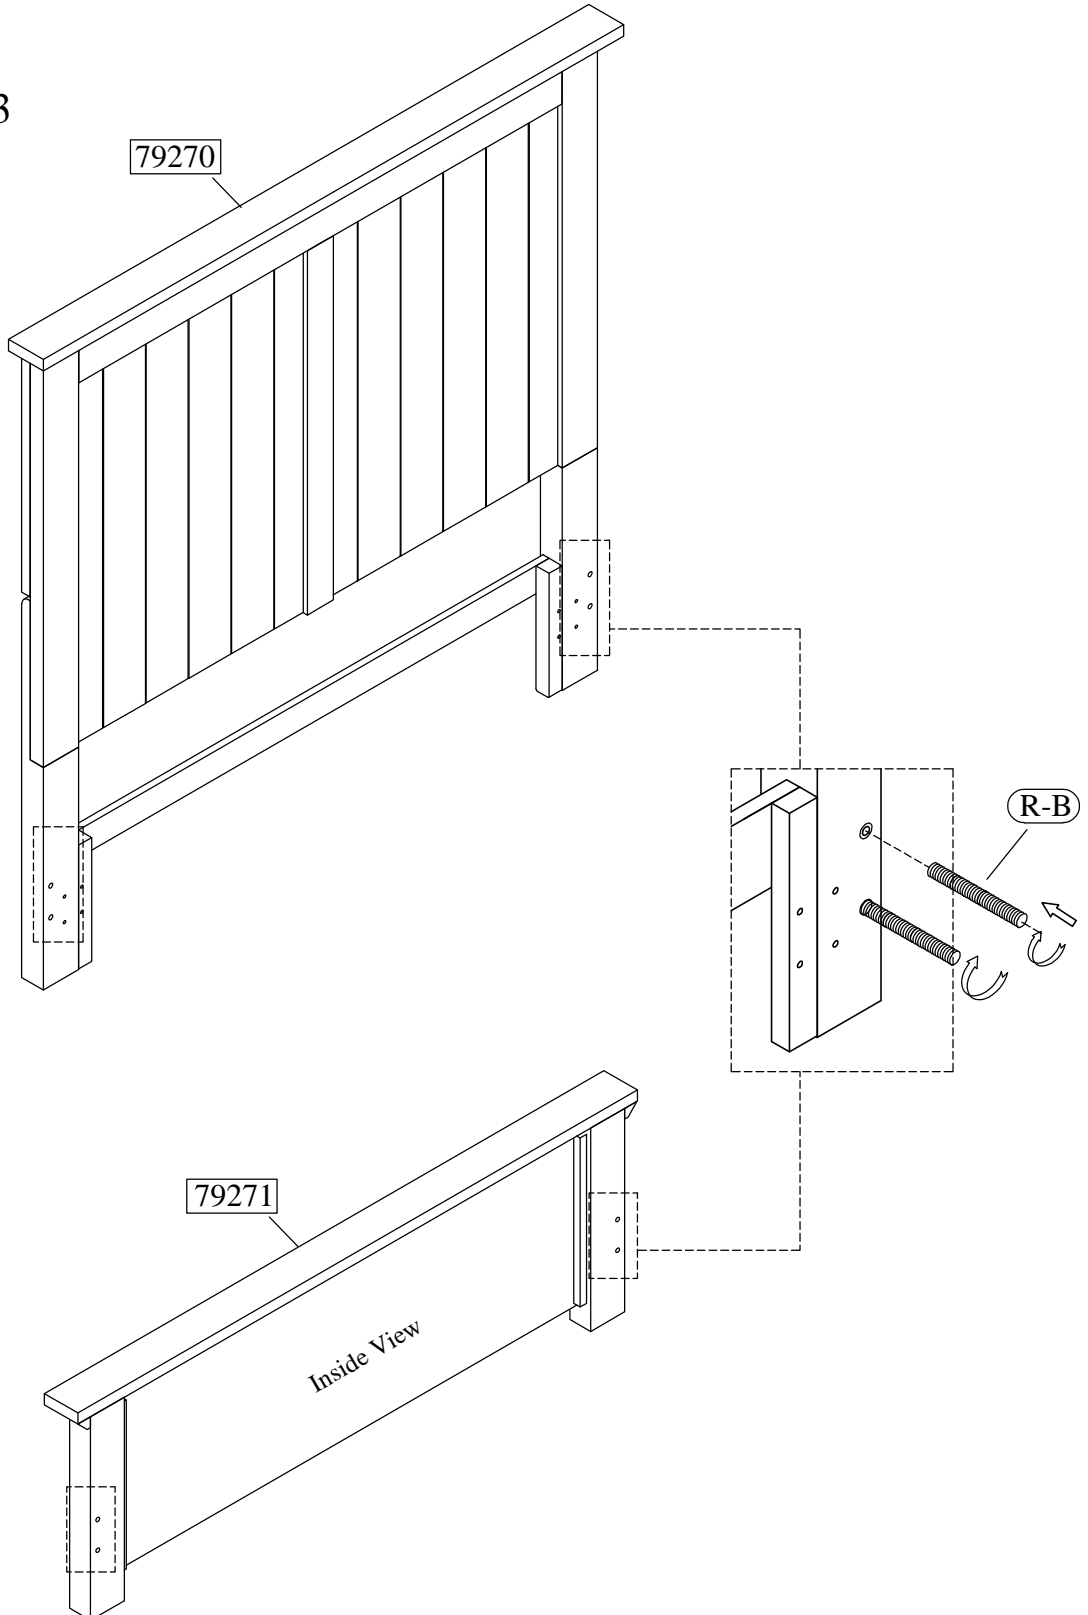


STEP 4

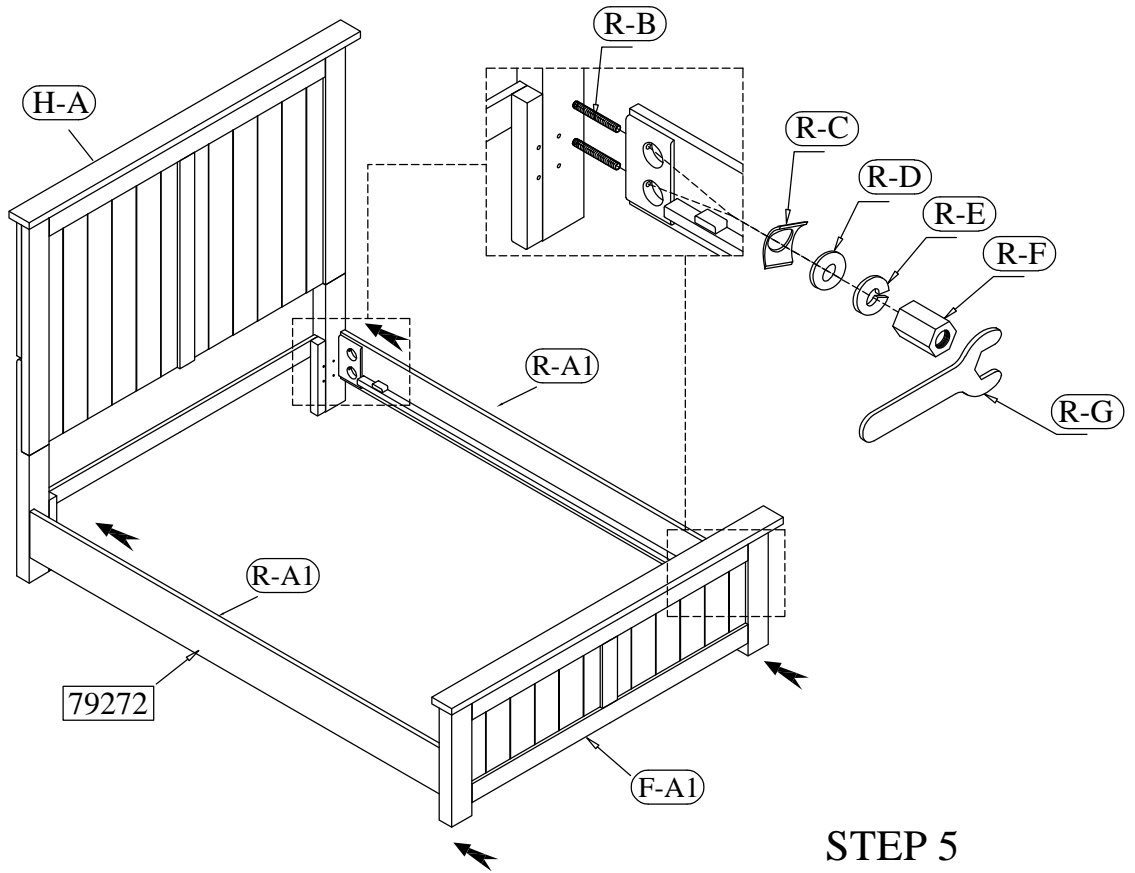

STEP 5

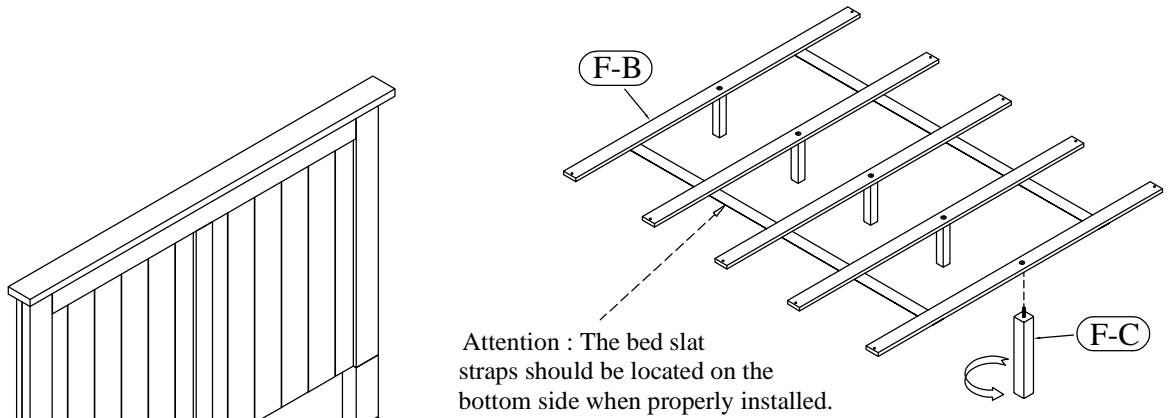

STEP 6


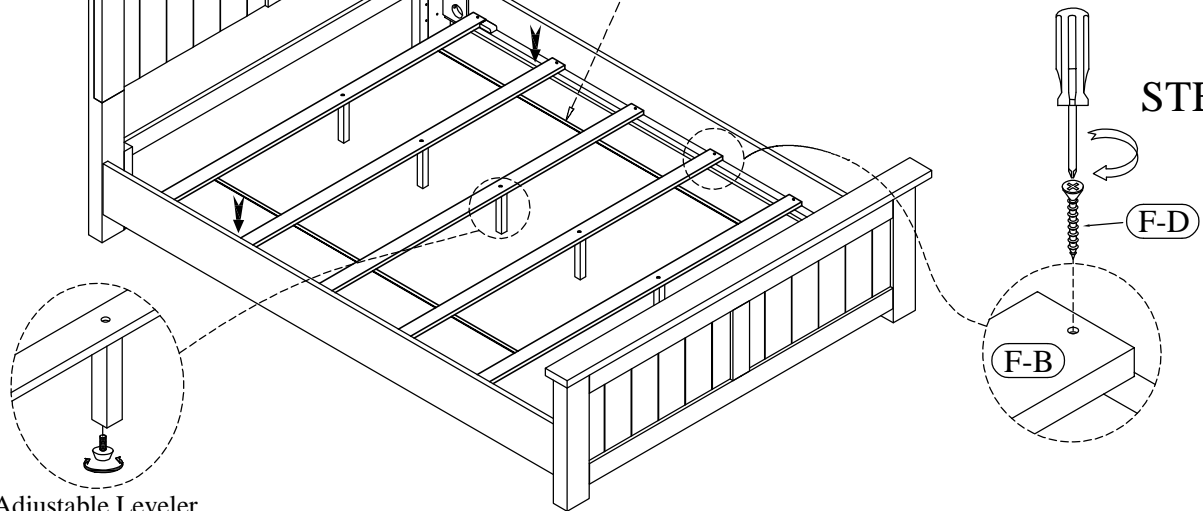


5/0 Queen Storage Bed

79270 -- 5/0 Panel Headboard

79273 -- 5/0 Storage Footboard

STEP 3

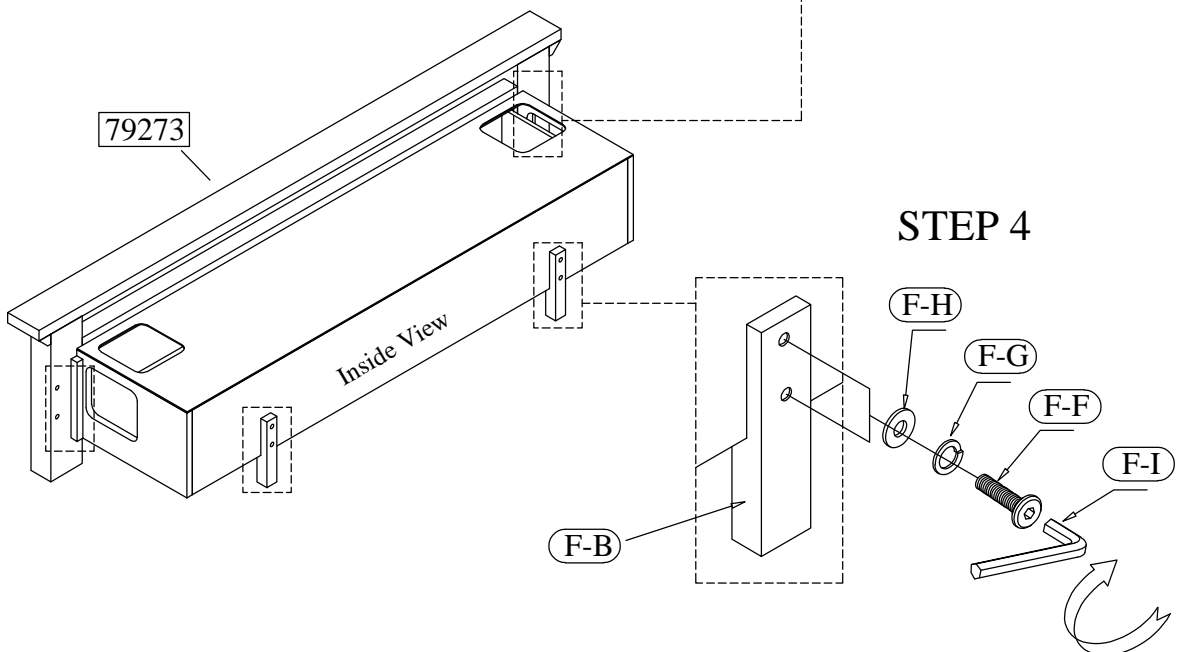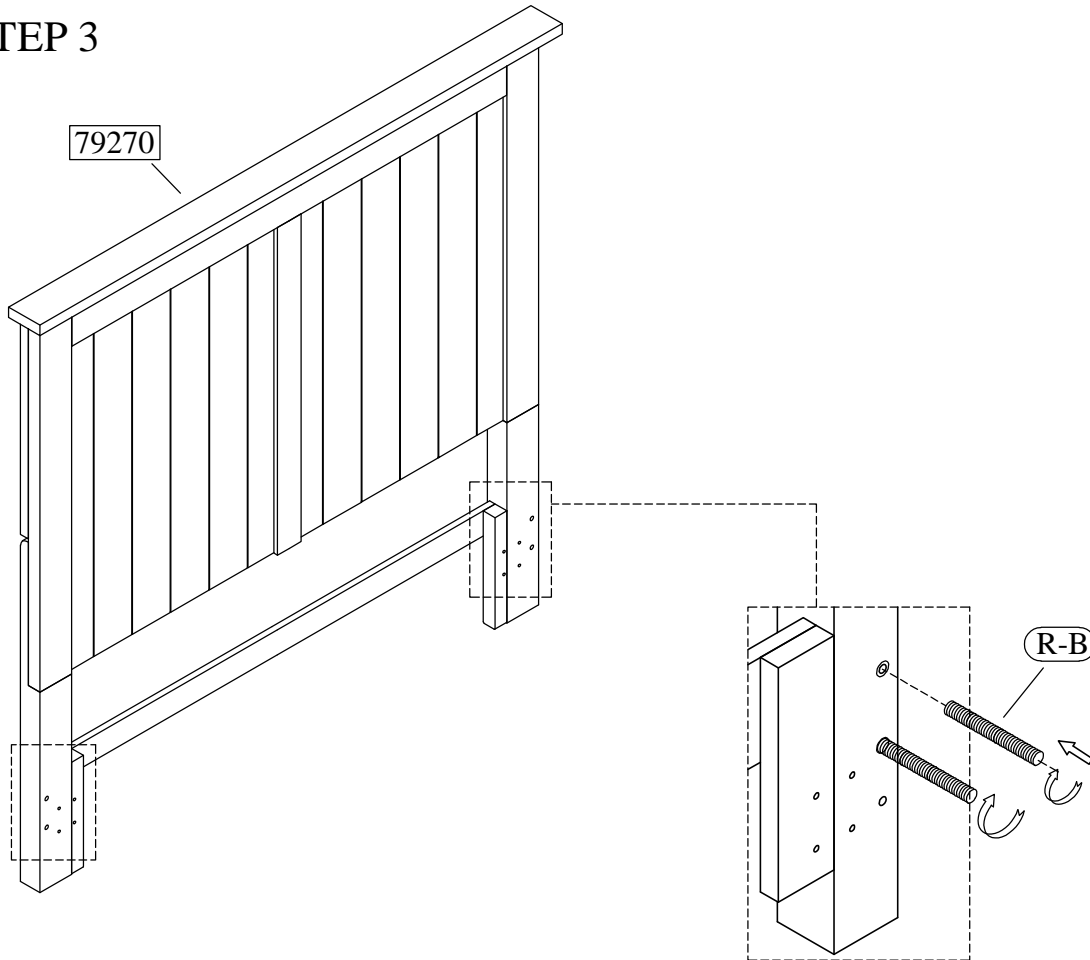


5/0 Queen Storage Bed

79270 -- 5/0 Panel Headboard


79273 -- 5/0 Storage Footboard

79274 -- 5/0-6/6 Storage Bed Rails


**STEP 5: Remove both drawers**

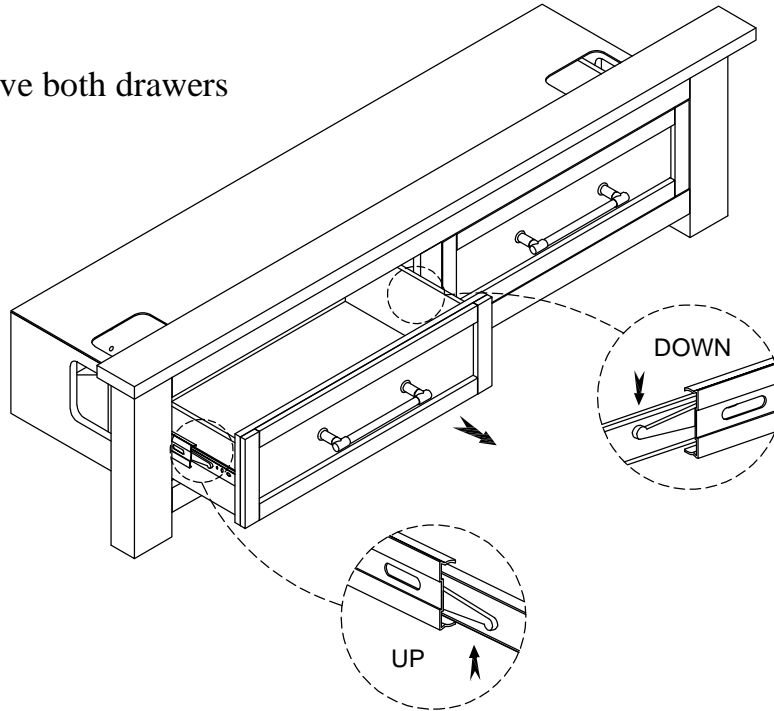


**STEP 6**

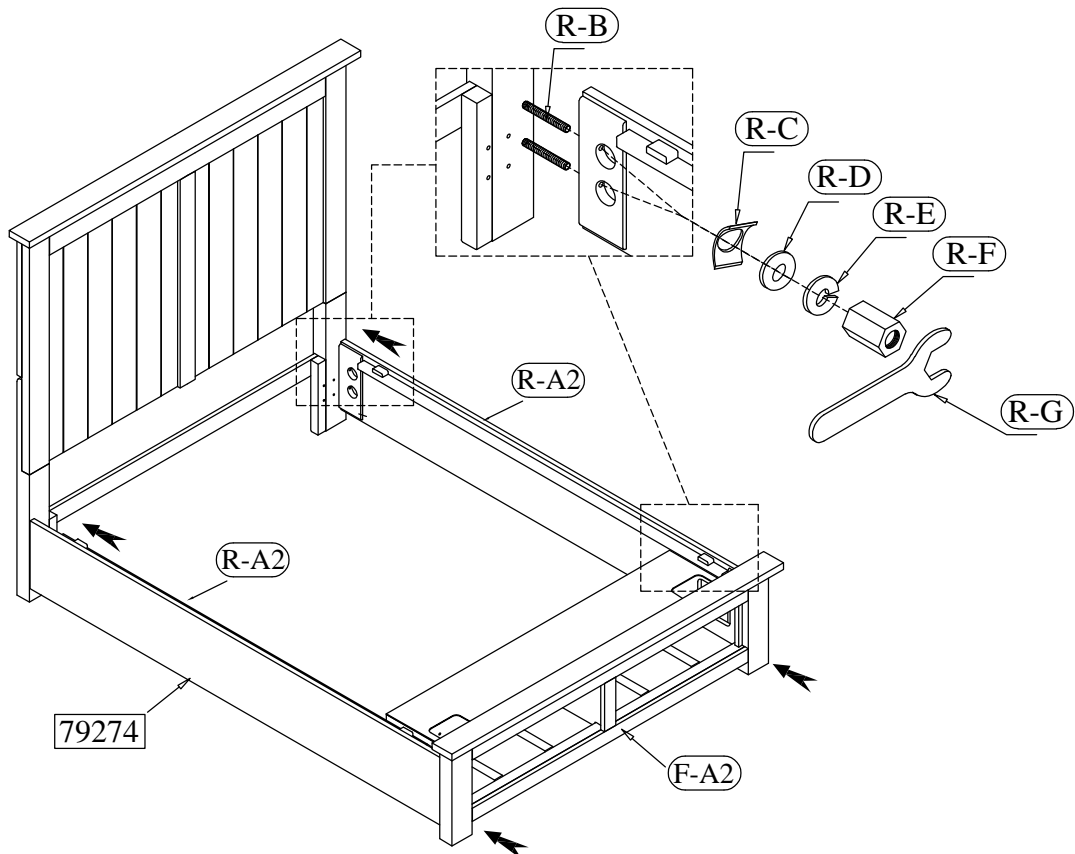


STEP 7

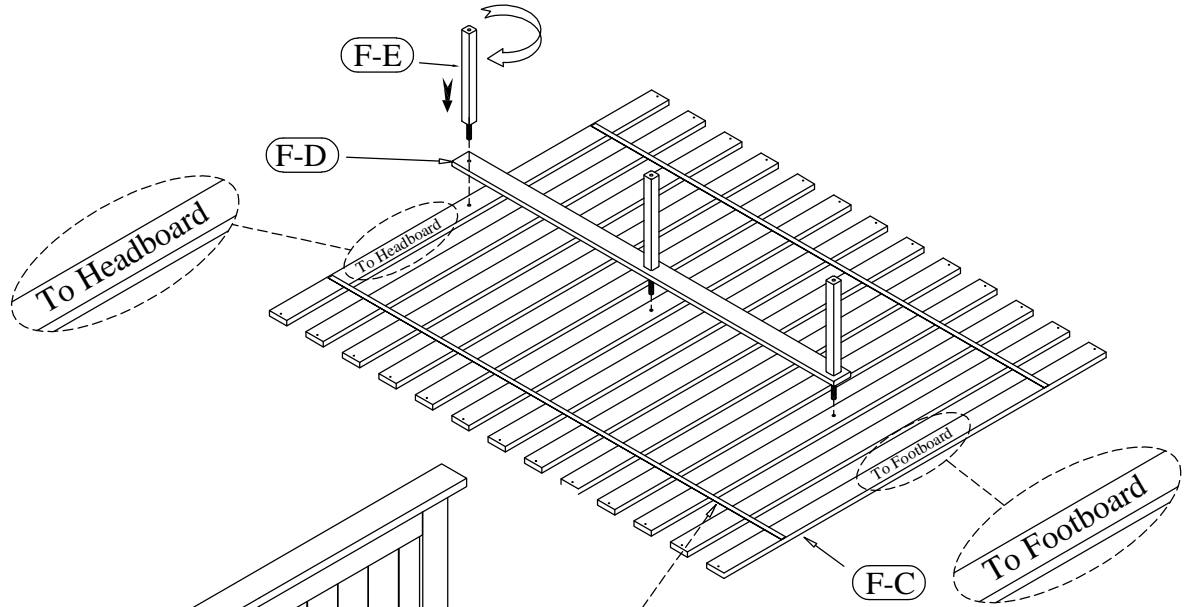


Attention : The bed slat straps should be located on the bottom side when properly installed.

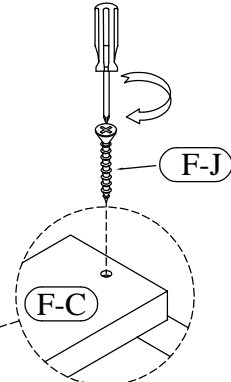

STEP 8

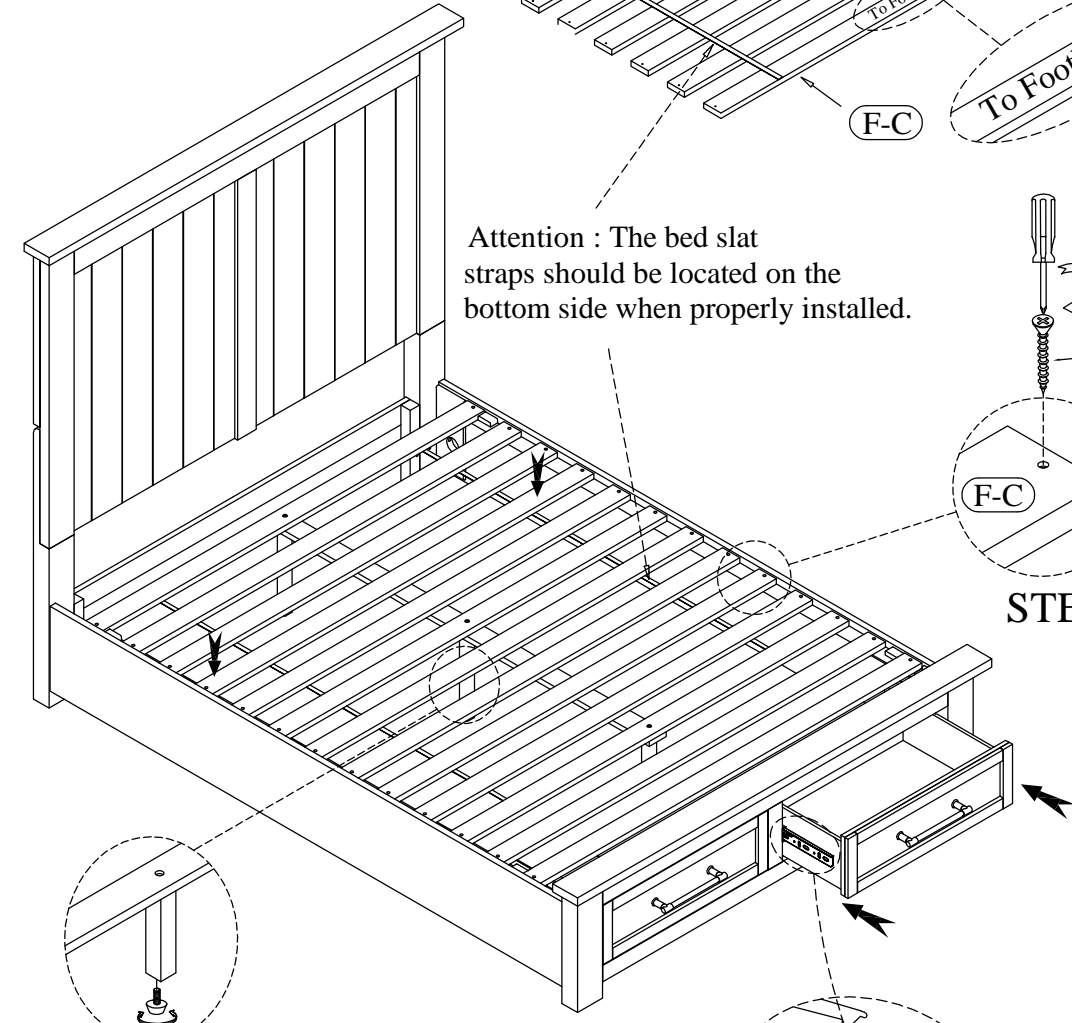

Adjustable Level

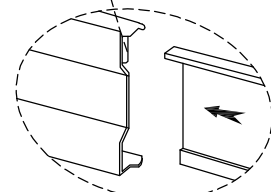


STEP 9

Attach both drawers

5/0 Queen Bed

79270 --5/0 Panel Headboard

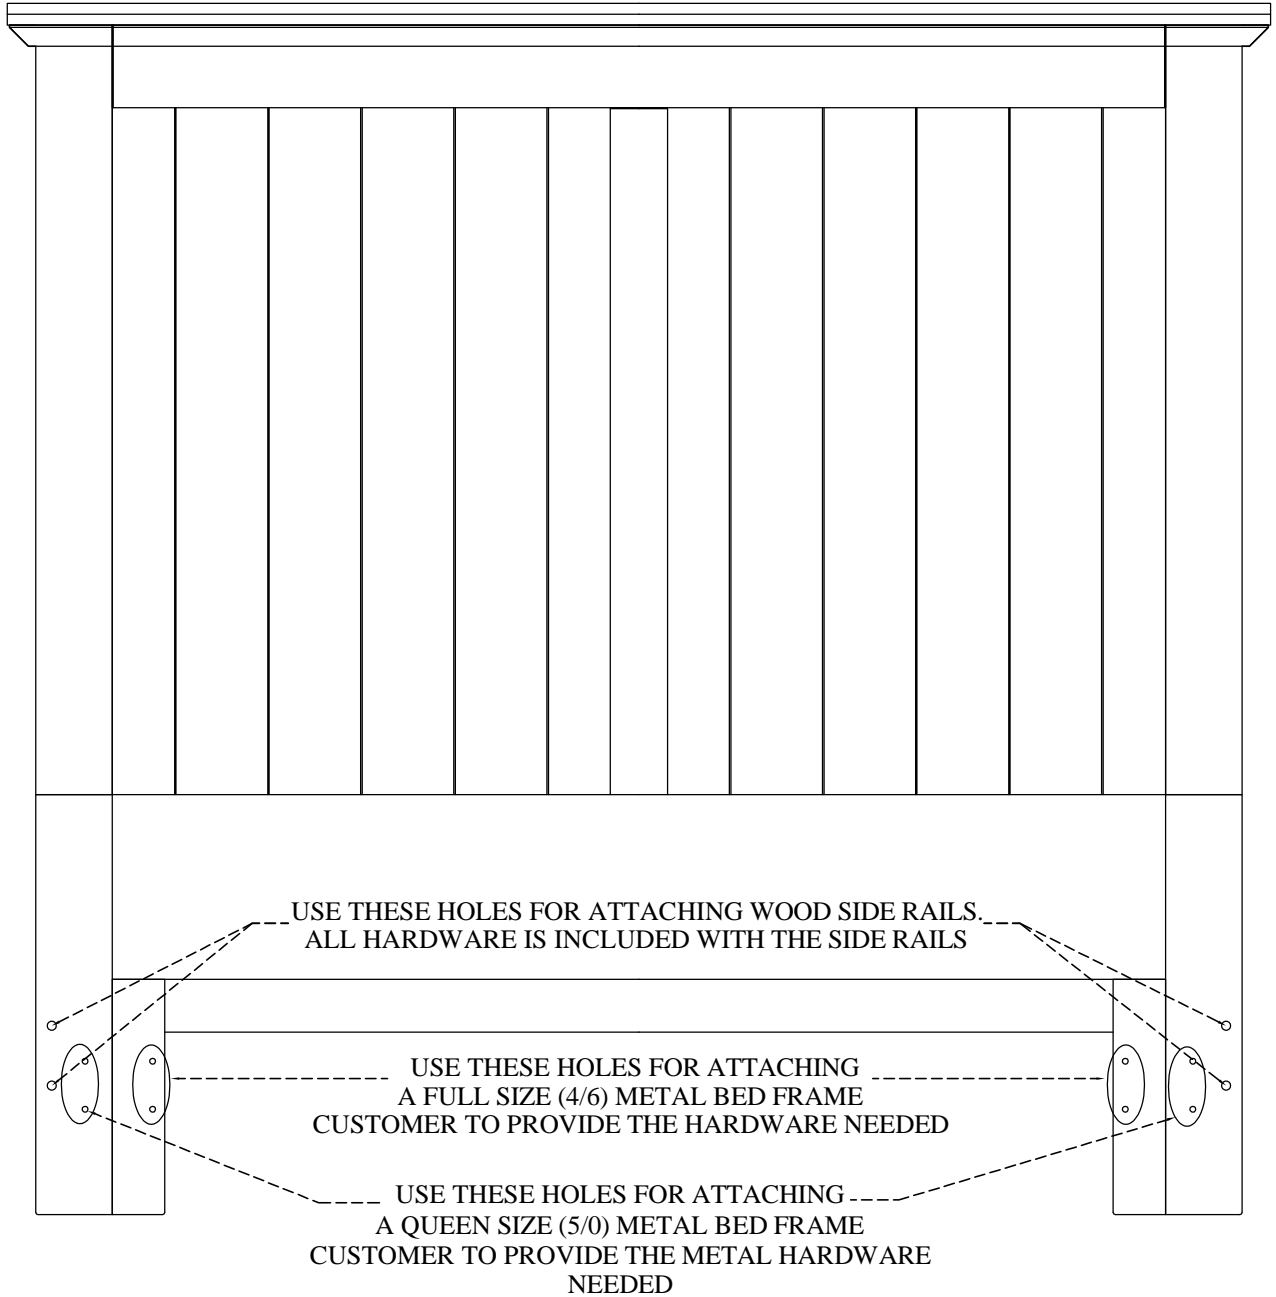

4/6 & 5/0 Bed

**THE HEADBOARD MAY BE USED ALONE WITH  
A QUEEN OR FULL SIZE METAL BED FRAME.**